

## RAC 2 Main Spindle Drive Controller

**Project Planning Manual** 

DOK-DIAX01-RAC02\*\*\*\*\*-PRJ1-EN-P





260436

LSA Control S.L. www.lsa-control.com comercial@lsa-control.com (+34) 960 62 43 01

• DOK-DIAX01-RAC02\*\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

## Chapter

About this Documentation

Table of Contents	
Construction of the RAC 2 Main Spindle Drive Controller	1
Planning the Control Cabinet	2
AS Programming Module	3
Condition Upon Delivery	4
Identification of Hardware	5
Storage and Transport	6
Mounting	7
Installation Guidelines	8
Commissioning Guidelines	9
Servicing Guidelines	10
Index	11
Overview of Supplementary Documentation	12

• DOK-DIAX01-RAC02\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

LSA Control S.L. www.lsa-control.com comercial@lsa-control.com (+34) 960 62 43 01

• DOK-DIAX01-RAC02\*\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

Titel	RAC 2 Main Spindle Drive Controller			
Type of documentation:	Project Planning Manual			
Documenttype	DOK-DIAX01-RAC02*****-PRJ1-EN-E	1,44		
Internal file reference	• 209-0042-4115-00			
Reference	This electronic document is based on the hardcopy document with document desig.: 209-0042-4115 EN/02.94			
This documentation is used:	<ul> <li>This documentation serves —</li> <li>to introduce the drive controller,</li> <li>to integrate the drive controller into the me</li> <li>to assist in mounting and installation,</li> <li>to describe programming module AS,</li> <li>to explain the hardware delivered and</li> </ul>	echanical o	design of the control cabinet, conditions.	
Function of the supplementary documentation	The supplementary documentation is u – when commissioning, operating and s – to integrate the drive controller into the "Documentation Summary" lists all te spindle drives and their contents. The "Supplementary Documentation" con	sed: ervicing, electrical chnical d ntains all	design of the control cabinet. documentation for the main titles with their order numbers.	
Change procedures	Designation of documentation up to present edition	Release- date	Coments	
	209-0042-4115-01 EN/02.94 DOK-DIAX01-RAC02*****-PRJ1-EN-E1,44	Feb/94 Jul./97	First Edition First E-Dok	
Copyright	© INDRAMAT GmbH, 1994 Copying of this document, and giving it to of the contents thereof, are forbidden with liable to the payment of damages. All rights are reserved in the event of the of a utility model or design. (DIN 34-1) The electronic documentation (E-doc) m such are to be used by the consumer for	others ar hout expr e grant of may be co or the pur	nd the use or communication ess authority. Offenders are a patent or the registration opied as often as needed if pose intended.	
Validity	All rights reserved with respect to the content of this documentation and the availability of the products.			
Publisher	INDRAMAT GmbH • BgmDrNebel-St Telefon 0 93 52 / 40-0 • Tx 689421 • Fa	raße 2 • x 0 93 52	D-97816 Lohr 2 / 40-48 85	

Dept ENA (MR,KK, FS)



## Summary of documentation "AC - Main Spindle Drives with ...

Figure: Summary of Documentation

## ... controlled main spindle motor or frameless spindle motor"



DOK-DIAX01-RAC02\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

• DOK-DIAX01-RAC02\*\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

LSA Control S.L. www.lsa-control.com comercial@lsa-control.com (+34) 960 62 43 01

Table of Contents

## **Table of Contents**

1. Construction of the RA	C 2 Mai	n Spindle Drive Controller	11
2. Planning the Control C	abinet		17
	2.1.	Operating Conditions	17
	2.2.	Mechanical Data	20
	2.3.	Thermal Data	26
	2.3.1	. Guidelines on the Use of Cooling Devices in Control Cabinets	28
	2.4.	Electrical Data	30
	2.5.	Summary of Technical Data	37
	2.6.	Type Codes	38
3. AS Programming Modu	ıle		39
	3.1.	AS Programming Module Types	40
	3.2.	AS Programming Module Compatibility	40
	3.3.	Type Plate Data	41
	3.4.	Type Code	41
4. Condition Upon Delive	ry		42
5. Identification of Hardw	are		43
6. Storage and Transport			46
7. Mounting			47
	7.1.	Mounting in the Control Cabinet	48
8. Installation Guidelines			50
9. Commissioning Guidel	ines		51
40. Semulating Quidelines			
To. Servicing Guidelines			52
	10.1.	Fault Diagnoses	52
	10.2.	Equipment Defect	52
	10.3.	Service Representatives	55
11. Index			57
12. Overview of Suppleme	entary D	ocumentation	60

9

• DOK-DIAX01-RAC02\*\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

1. Presenting the RAC 2 Main Spindle Drive Controller



Figure 1.1: RAC 2 Main Spindle Drive Controller

The RAC 2 main spindle drive controller provides intelligent digital control of INDRAMAT 2AD asynchronous main spindle motors and 1MB frameless spindle motors with a continuous motor output of 30 to 52 kw at the drive shaft of the motor.

Main Spindle Drive Drives implementing the RAC 2 drive controller are characterized by high stiffness and a broad speed range with continuous power. This makes them particulary well-suited for use as main spindle drives in numerically controlled machine tools.

Spindle Positioning In addition to the broad speed range, the AC main spindle drive with RAC 2 has an internal position control loop. It independently positions the spindle in response to a signal, e.g., for the purpose of exchanging a work piece. Maximum resolution is 1/4 000 000 revolutions. The drive controller internal position control loop is closed either by motor feedback (with direct drive or 1:1 gears) or by additional, optional spindle feedback (change speed or belt gears).

C-Axis Operation The AC main spindle drive with RAC 2 is also capable of operating the spindle as a servo-axis (C-axis) with extreme precision in the position control loop. The main spindle drive is equipped with high-resolution feedback to handle the low speeds which this requires. The controller acknowledges rotor position with a maximum resolution of 1/4 000 000 revolutions. This means that even the lowest speeds can be precisely controlled.

Controller for Direct Mains Connection	The RAC 2 can be directly connected to three-phase supply networks with either 3* 400 volts, 50 Hz, +/- 15%, or 3* 460 volts, 60 Hz, +/- 10%. Both the mains contactor and the emergency stop switch are integrated. The energy regenerated during braking is fed back into the three-phase supply network. This occurs even in an emergency stop. The RAC 2 is capable of stopping the main spindle via direct current braking in the event of a power failure.
Cooling	The heatsink for both power electronics and fan are built into the RAC main spindle drive controller housing. The cooling air flow is guided through the unit in an air shaft.
	RAC drive controllers can be cooled with control cabinet outside or inside air. Either is possible in every RAC. The necessary structural changes are simple to make and can be performed without acessories.
Cooling with Air Inside the Control Cabinet	The cooling air is drawn in from inside the control cabinet and then blown out.
Cooling with Air Outside the Control Cabinet	The cooling air is drawn in and blown out of the control cabinet through cut-outs in the control cabinet backwall. The heat from energy loss is fed into the control cabinet outside air.



Figure 1.2: Possible cooling methods for the RAC 2

Hose Cooling

If for structural reasons it should be not be possible to place cut-outs in the control cabinet backwall, then the RAC 2 controller can be equipped with hose cooling.

The cooling air is then drawn in over a hose outside of the control cabinet and blown out again.



Mounting parts are needed for hose cooling. These parts are supplied as an accessory kit. The hose itself is not part of the kit, but can be ordered from INDRAMAT.



Figure 1.3: Hose cooling in the RAC 2



Figure 1.4: Allocation of terms on the RAC 2

With the presence of the link circuit connection and the control voltage bus, the RAC 2 is equipped to supply an additional modular main spindle controller.

	1. Presenting the RAC 2 Main Spindle Drive Controller
Programming Module	The individual parameters, needed for installation and application, are input on site during commissioning, using the keypad on the control panel. These parameter values are stored, together with the motor optimizing parameter values, on the plugged-in programming module.
	Only the controller needs to be exchanged should servicing become necessary. The programming module is reused in the new controller. The drive features are stored on the programming module and are immediately available.
Interface Options	
Speed Set-Point	The controllers are available with different interfaces for the speed set- point:
	<ul> <li>Analogue speed set-point</li> <li>+/- 10 volts for connection to conventional CNC controls,</li> </ul>
	<ul> <li>Digital speed set-point</li> <li>16 bit parallel for connection to PLC controllers, advantageous with longer circuit lengths and low set-points,</li> </ul>
	<ul> <li>SERCOS interface The real-time communication of set-point and actual values of speed, position and torque, including parameter handling to the CNC con- trols.</li> </ul>
Additional encoder input, synchronous input	An additional encoder input is available for connecting spindle feedback to the internal position controller. Additional encoder input and synchro- nous input (connection of lead spindle feedback) are available for spindle synchronization.
Additional Interface	The RAC 2 drive controller offers an optional additional interface which is available as
	<ul> <li>an incremental encoder output for position control via the CNC control during C-axis operation or screwing, tapping,</li> </ul>
	<ul> <li>a serial interface for storing and loading parameters with a PC,</li> </ul>
	<ul> <li>an input for digital position set-points</li> <li>16-bit parallel, using the PLC controller to dial 3,600 positions</li> </ul>



Figure 1.5: Individual components of a main spindle drive with allocation of terms.

2. Planning the Control Cabinet

## 2. Planning the Control Cabinet

- The information to structurally integrate the RAC 2 main spindle drive controller is broken down into:
- operating conditions
- mechanical data
- thermal data
- electrical data
- technical data/type code

## 2.1. Operating Conditions

Ambient Temperature

The main spindle drive values listed apply without restriction if the controller is operated within an ambient temperature range of +5 to +45 degreess C. Maximum permissible ambient temperature equals +55 degrees C. There is a reduction in the given values as indicated in the diagram in Fig. 2.1.



Figure 2.1: Ambient temperature-dependent reductions in drive data.

Installation Altitude

Permissible

ambient humidity

Protection Classification for

the RAC Controller

Maximum installation altitude equals 1000 meters above sea level. The values for rated torque and power, as listed for the main spindle drives, decrease with greater altitude. This decrease is depicted in the diagram in Figure 2.2.



Figure 2.2: Altitude-dependent reduction in drive data

Maximum ambient humidity corresponds to humidity class F, in acc. with DIN 40 040.

This means that it is possible to operate the controller in humidity-risk rooms such as workshops in cold/moderate and dry/warm climates. Average relative humidity must not exceed 70% in the most humid month of the year! Condensation water must not be permitted to form!

The protection class is IP 10 in acc. with EN 60 529 (DIN VDE 0470).

This means that the controller is protected against penetration by solid objects with a diameter greater than 50 mm.

The controller is not protected against

- water and
- deliberate penetration, e.g., by a hand. It does keep larger body surfaces out.

The RAC 2 has been manufactured in accordance with DIN VDE 0160, Sec. 5.5.1.3 and 6.5.1.3 for mounting into a control cabinet or sealed housing. Sufficient protective measures to prevent contact must be implemented by engineering in a manner appropriate to the respective control cabinet design, and these must be in acc. with the safety guidelines for the specific application. (For industrial use, e.g., EN 60204 / DIN VDE 0113, Sect. 1).

• DOK-DIAX01-RAC02\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

Control Cabinet Protection Type The type of protection used for the control cabinet is not affected if the RAC control cabinet is cooled with inside air.

The type of protection is affected if the RAC is cooled with outside air because the air flow is drawn in over cut-outs and fed through the control cabinet.

IP 54 is the protection category for the inside of the control cabinet, if mounted according to guidelines (Chap. 7). IP 24 is the protection category for the fan (see Fig. 1.2.).

## 2.2. Mechanical Data







Figure 2.4: Drill diagram for backwall of control cabinet.



Figure 2.5: Additional dimensions for cooling control cabinet with outside air.



Fig. 2.6: Additional dimensions for cooling control cabinet with inside air.



Figure 2.7: Additional dimensional data for hose cooling.



Figure 2.8: Flange II dimensions sheet for hose cooling.

## 2.3. Thermal Data

**Power Dissipation** 

The RAC 2 drive controller emits heat during operation which is discharged over the air slits in the cover and the built-in heatsink.



Figure 2.9: Cooling the RAC 2 drive controller

The internal and external power dissipated by the RAC 2 controller is workload-dependent. It suffices to know what the power dissipation dependent upon rated power of the main spindle motor is, when working out the dimensions for the control cabinet or cooling system.



Figure 2.10: Breakdown of internal and external power dissipation

The controller can be cooled with either control cabinet inside or outside air. Depending upon the mounting method, the cooling air for the heatsink either remains in the control cabinet or is drawn in from outside and then blown back outside. (Heat exchange principle.)

The controller is supplied with the outside air cooling method. Structural changes are necessary if inside air or hose cooling are to be used (see Chap. 7).

If air is to be fed in and out over an air shaft, then some consideration must be given to the dimensions of the air shaft (required air flow)! If hose cooling is used, then the hoses must be kept as short as possible with no more than two 90 degree inflections.

The air flow value, Q, and maximum permissible overpressure, Pmax, should be monitored as a safety measure.



Both air shafts and heatsinks must be kept clean, otherwise there is danger of overheating!

2.3.1. Guidelines on the Use of Cooling Devices in Control Cabinets	The RAC 2 controller can only be operated with an ambient temperature of up to 45 degrees C. without reduction in drive data. In order to be able to maintain this, it may be necessary to use a cooling device cool the inside air of the control cabinet.
Danger from Humidity	Humidity and condensation water endanger the installed controller if the cooling devices used are not properly installed!
Danger from Condensation Water	Humid air enters the control cabinet and creates condensation on the controller as it cools down!
Proper Use of Cooling Devices	If the cooling unit is improperly arranged in the control cabinet, then it is possible that the condensation water constantly being created in the cooling unit can either drip on or be sprayed onto the controller with the
Avoiding Condensation	air flow.
	<ul> <li>Only well-sealed control cabinets should be used with cooling devices. This helps avoid condensation caused by hot, humid outside air which could otherwise enter the cabinet!</li> </ul>
	- If control cabinets are operated with the door open (during commission- ing, servicing, etc.), it must be warranted when closing the door, that the controllers are not cooler than the outside air, as otherwise dew could form. This means it is necessary to run the cooling unit, even if the facility is shut down, until the temperature of the control cabinet air and that of the installed units has reached the same level.
	- Set the cooling device at a constant 40 degrees C, no lower!
	<ul> <li>Cooling devices with follow-up temperature should be set so that the temperature of the air inside the control cabinet is less than 2 degrees</li> <li>C. lower than the temperature of the air outside the control cabinet. Set temperature limit at 40 degrees C.!</li> </ul>
	- The cooling units must always be arranged so that any condensation water formed cannot drip onto the installed controllers. Cooling units mounted on the top of the controllers necessitate a special control cabinet design (see Fig. 2.11)!
Avoiding Dripping or Spraying Water	– The control cabinet should be constructed in such a way that the cooling unit fan cannot spray the condensation water, which has collected after shutdowns, onto the controller (see Fig. 2.12)!

LSA Control S.L. www.lsa-control.com comercial@lsa-control.com (+34) 960 62 43 01

2. Planning the Control Cabinet



Fig. 2.11: Cooling device mounted on top of control cabinet



Figure 2.12: Cooling device arranged on front of control cabinet



The cooling device must not be permitted to drip condensation water onto the installed controller! Cooling device temperature must be properly set!

## 2.4. Electrical Data

Connection Plan (schematic)

The connection plan depicted in Fig. 2.13 is schematic in nature. It is a checklist for all electrical connections required for operating a main spindle drive.

The electrical connections of INDRAMAT's main spindle drives are standardized to keep the variety of cables limited.

There are three categories of electrical connections for all of INDRAMAT's main spindle drives:

- feedback and CNC connections
- power connections
- controller-specific connections

Independent of the main spindle controller, the feedback and CNC connections and the power connections (mains supply, motor power supply) have identical plug and terminal assignments. The circuit diagrams are summarized in the document: "Electrical Connections of the Main Spindle Drive; Planning and Design" (doc. no. 209-0042-4111). This documentation is a must when generating the facility circuit diagrams!

In addition to the already noted electrical connections, mains contactor controls and monitors, as well as a "ready state" evaluation contact are needed to integrate the RAC 2 controller into the control cabinet circuits. These connections are specific to all RAC controllers. They are connected via terminal strip X15 (see Fig. 2.17) The aforementioned documentation contains a connection diagram.

Installing the controllerspecific interfaces

Connection diagrams

power connections

for feedback, CNC and



LSA Control S.L. www.lsa-control.com comercial@lsa-control.com (+34) 960 62 43 01



Figure 2.14: Principle circuit diagram of the RAC 2control circuit and power supply

See documentation for Bb "ready" state conditions. "AC Main Spindle Drives with Controlled Asnyhconous Motor or Frameless Spindle Motor-Description of Application", doc. no. 209-0041-4109. 2. Planning the Control Cabinet

Feedback and CNC Connections Assignment and designation of terminals are the same for all interfaces of all feedback and CNC connections independent of the main spindle controller. They can be found in the document: "Electrical Connections of the Main Spindle Drives" (doc. no. 209.0042.4111) and in "AC Main Spindle Drives with Controlled Asynchronous Motor or Frameless Spindle Motor; Description of Application" (doc. no. 209-0041-4109).

Both the function and the signal level linked to this interface are also the same independent of the main spindle controller. They can be found in the latter documentation.

The required electrical connections are dependent upon

- the selected functional options of the controller.

The interfaces found in every main spindle controller (standard interfaces) are allocated to the respective connection plan with the use of a text string. Figure 2.15 depicts this allocation. Figure 2.16 depicts the allocation of the functional options of the controller to the respective connection plan with the use of a text string.

The connection plans for the feedback and CNC connections can easily be located with the use of the text string (last column of Figs. 2.15 and 2.16) in the documentation entitled "Electrical Connections of the Main Spindle Drive; Project Planning Notes". The index at the end of this documentation lists these text strings.

Type Designat	tion: <u>F</u>	RAC 2.2- • • • - • • •	- • • • - • •
V		"E	see doc. lectr. Connections of the Main Spindle Drives"
Standard interfaces	Designation	Connecting terminal	Text string
CNC interfaces	Controller input, signal and analogue outputs	X2, 37 poles	IKS 610
Feedback interface	Motor feedback connection	X3, 15 poles	IKS 315

Figure 2.15: Allocation of standard interfaces to the connection plans of the feedback and CNC connections.

Туре	Design	ation: RAG	℃ 2.2- • • • - • • • •	<u> </u>
l functional options				
Functional options	Codes	Designation	"E Connecting terminal	Circuit diagram see doc. Electr. connections of the Main Spindle Drive" Text string
	A	analogue	X4, 9 poles	IKS 613
Speed set-point value input	D	digital 16 bit parallel	X4, 25 poles	IKS 612
(type key field 6)	L	SERCOS-interface	X4, optical waveguides	IKO
	0	without additional encoder input		
Additional		with P additional	with high-resolution	IKS 312
encoder input (type code	Y	encoder	incremental encode with 15 poles (그 )	er IKS 327
field 7)	field 7) synchronous input		X5a, 15 poles ( <b>ル</b> )	lead spindle feedback
	0	none		
Additional	D	digital position set-point	X13, 25 poles	IKS 612
interface (type code I field 8)		incremental encoder output	X13, 15 poles	IKS 323
	S	serial interface RS 232-C	X13, 25 poles	IKS 016

Figure 2.16: Allocation of the functional options of the controller to the electrical connections on the unit and the connecting plans for feedback and CNC connections

Controller-Specific Connections

There are specific plug-and-socket connections for integrating the controller into the control cabinet circuitry and for connecting the NTCresistor of the motor. They are included in electrical connecting accessories E1-RAC.

The electrical connecting accessories consist of the following parts:



Figure 2.17: E1-RAC Electrical Connecting Accessories

Power connections to the motor

Connection plans and conductor cross sections can easily be located using the text string (last column of Figure 2.18) listed in the document: "Electrical connections of the main spindle drives; Project Planning Notes". The index of this document lists this text string.

The conductor cross sections are dependent upon the motor rated current of drives which permit motor overload over short periods of operation.

Drive combination: R w	AC 2.2 - • • • - • • • - • • • - • • • · • • • •
main spindle motor	Circuit plan see doc. "Elec. Conn. of the Main Spindle Drive" text string
2AD 160 B 2AD 160 C	Connection 2AD 160
2AD 180 C 2AD180 D	Connection 2AD 180
1MB 310 D 1MB 310 F 1MB 375 B	Connection 1MB on RAC

Figure 2.18: Allocation of the Main Spindle Motors in the Power Connection Plan

The smaller values can be used for dimensioning in the case of those motor-controller combinations where the continuous output of the controller is smaller than that of the motor.

See Figure 2.19, "RAC 2 Technical Data" for continuous controller output with different current types.

Power Connections to the Three-Phase Alternating Current Network If the mains voltage and the rated connection voltage of the RAC agree, then the controllers can be connected to either grounded or ungrounded three-phase current networks. The mains connection plans for the different mains types are the same for all RAC controllers (RAC 2, RAC 3, RAC 4). They can be found in the document applicable to all main spindle drives: "Eletrical Connections of Main Spindle Drives; Project Planning Notes" (doc. no. 209.0042.4111). This document contains the data for conductor cross sections, rated fuse currents and any power transformers which might be needed.

## 2.5. Technical Data Summary

Designation	Symbol	Unit	•	•	
			RAC 2.2-200 - ••• - ••	RAC 2.2-250- • • • - • •	
Cooling			via bui	ilt-in fan	
Rated connection voltage	U <sub>(AC)</sub>	V	380V-type: 3 x AC 400 V, 50-60Hz, -15/+10 460V-type: 3 x AC 400 V, 50 Hz, ± 15% or 3 x AC 460 V, 60 Hz, ± 10%		
Continuous controller output (as relates to motor output shaft)	P <sub>(cont)</sub>	kW	55	65	
Peak controller output (as relates to motor output shaft)	P <sub>(max)</sub>	kW	55	78	
Continuous regeneration output (as relates to motor output shaft)	P <sub>(reg)</sub>	kW	37	43	
Peak regeneration output (max. 5 secs. (as relates to motor output shaft)	) P <sub>(reg.max)</sub>	kW	55	78	
Weights					
Weight of controllers	m	kg	121		
Weight of mounting frame M1-RAC4	m	kg	2	2	
Weight of accessories M2-RAC (hose cooling)	m	kg	1,	7	
Environmental conditions					
Perm. ambient temperature range with rated data		°Celsius	+5	. +45	
Max. perm. ambient temperature range with rated data reduced to 80%		°Celsius	+5	55	
Storage and Transport Temperatures		°Celsius	-30 +85		
Installation altitudes without reduction of rated data	m above	sea level	max.	1000	
Perm. humidity in acc. with humidity category			F acc. to D	DIN 40 040	
Type of protection			IP 10 acc. to EN 60	529 (DIN VDE 0470)	

Figure 2.19: RAC 2 Technical Data

## 2.6. Type Codes

Type code fields:	Example:	RAC 2.2	<u>2</u> - <u>20</u>	)0 - 4	60 -	A00	<u>)</u> - <u>W</u>
1. Designation:	RAC						
2. Series:	2						
3. Deisgn:	2		J				
4. Type current: 300 A 400 A	200 250						
<ol> <li>5. Rated connections voltage: 3 x AC 400V/50-60Hz</li> <li>3 x AC 400V/50Hz, 3 x AC 460V/60Hz</li> </ol>	380 460						
6. Speed set-point: analogue (+/- 10 V) digital (16 bit parallel) SERCOS interface	A D L						
<ul> <li>7. Additional encoder input: Without additional encoder input Additional encoder input for spindle feedback or second motor feedback Additional encoder and synchronous input (Speed set-point = A)</li> </ul>	0 P Y						
<ol> <li>Additional interface: Without additional interface Rated position value, digital (16 bit parallel) Serial interface (RS 232 C) Incremental encoder output</li> </ol>	O D S I						
<ol> <li>Additional bleeder:</li> <li>Without additional bleeder</li> <li>With additional bleeder</li> </ol>	W Z						
10.Cooling: With built-in fan	1						

Figure 2.20: Type Codes for RAC 2

• DOK-DIAX01-RAC02\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

LSA Control S.L. www.lsa-control.com comercial@lsa-control.com (+34) 960 62 43 01

3. AS Programming Module	The AS programming module plugged into the controller adapts the controller to the main spindle motor and implements the operating characteristics of the main spindle drive.
	INDRAMAT supplies a matching AS programming module (standard delivery acc. to selection list) for every main spindle drive offered.
	INDRAMAT main spindle drives are microprocessor controlled.
Quick Drive Commissioning	A matching AS programming module means that the main spindle drive will be ready with the first run without any adjustment work. Expert connection work (see Chap. 2.4) and proper commissioning are prereq- uisites (see Chap. 9).
	INDRAMAT main spindle drives can be adapted via the parameters to the facility situation and the functional demands of the application.
Advantages derived from exchange of units	The AS programming module contains both software and parameters. Should a unit need to be exchanged, then the controller requires no additional adjusting. It is immediately matched to both motor and facility by simply plugging the programming module – thus far used and there- fore already matched – into it.
Duplicating	Already adapted programming modules can be easily duplicated for additional, similar machines. This is done either with the parameter duplicating adaptor or by means of serial interfaces and a storage device (PC or something similar).
Parameters	The software contains two groups of parameters:
	- drive-related and
	- application-related parameters.
	The drive-related parameters affect the operating characteristics of the drive. INDRAMAT defines and fixes the appropriate parameter values which implement the operating characteristics of the drives offered.
	The drive-related parameters activate or affect, according to application, the functions of the main spindle drive, and the drive is adapted to the facility's application.
Input and Change of Parameter Values	Input and change of parameter values is the same in all INDRAMAT main spindle controllers. The task is performed using the keypad on the control panel.
	For further information, please see the chapter on "Using the Controller" in document "AC Main Spindle Drives with Controlled Asynchronous Motor or Frameless Spindle Motor; Description of Application", (doc. no. 209-0041-4109).

3.1. AS Programming Module Design	AS programming modules contain the application-related parameter values defined by INDRAMAT.
Standard	The application-related parameters are set to standard values. The facility or the application-dependent parameter values are input on site.
	The customer is responsible for documentation and administration of these facility and application-dependent parameter values.
Customer-Specific Values (for larger series)	If, after facility and applications-dependent parameter values have been input, a programming module is also to be documented, administered and delivered by INDRAMAT in this condition, then it becomes neces- sary to define a customer-specific programming module. This can be done upon request in agreement with INDRAMAT for an additional fee.
3.2. AS Programming Module Compatibility	A state-of-the-art (updating programming module AS) programming module for the operation of the drive is automatically part of a delivery without a change in order specifications being necessary (type designa- tion). Updated programming modules are compatible with programming modules already delivered.
Updating AS Programming Modules	It is not necessary to make any changes in an order as there should be no doubt that the drive being operated is state-of-the-art.
	This means:
	- software fault correction,
	<ul> <li>expansion of the range of functions without impairing existing functions, and,</li> </ul>
	- improved parameter values for the motor-controller combination.

## 3.3. Type Plate Information



Figure 3.1: AS Programming module with type plate specifications

## 1 Type designation

The final digits of a standard design programming module are -000. The final digits of customer-specific programming modules are the customer-specific digits assigned by INDRAMAT.

## ② Motor type data

### ③ Drive controller type data

The type data for motor and controller found on the programming module must agree with that of the motor and controller installed, as otherwise there is risk of damage!

## **(4)** Software designation

The letter-digit combination, including the letter "V", indicate the type of software with version. The digits that follow are the counter digits of the software update.

## **(5)** Date parameters determined

This helps determine parameter status.

## 3.4. Type Code

Type code fields:		Example:	AS	53/004-003
1. Designation:		AS		
2 Main spindle drive cor	troller			
KDA 3.2		3		
RAC 2.2		5		
RAC 3.1		6		
TDA 1.1		7		
RAC 4.1		8		
3. Software coefficient				
Main spindle drive (sta	andard)			
(all combinations not I	isted below)	1		
Servo-drive (always ir	cludes incremental enc	oder output)2		
Main spindle drive wit	n incremental encoder o	output 3		
Main spindle drive wit	n SERCOS interface	4		
Main spindle drive wit	n additional functions	5		
4. Motor feedback				
High-resolution motor	feedback	0		
5. Coefficient for motor-o	ontroller combination			
Defined and documen	ted by INDRAMAT	e.g., 04		
6. Design				
Standard		000		
Customer-specific, e.e	.,: 003	003		
			Qu	uellverweis: INN 07.20

Figure 3.2: Type codes for AS programming modules

# 4. Condition Upon Delivery

The RAC 2 and its accessories are packed into one carton (transport container) for delivery. Accessories have been screwed onto the unit (M1-RAC2), or packed into plastic bags loosely placed in the cartons (possibly M2-RAC 4 and E1-RAC).

An envelope containing two delivery slips is attached to the outside of the transport container. There are no additional accompanying documents unless specifically requested.

By splitting the glue strips open, it is possible unpack without causing damage.

The cooling method of the RAC 2 controller as generally supplied is the control cabinet outside air type (see Chapter 1). Current and insulation have been tested in acc. with VDE 0160.

## 5. Identification of Hardware

RAC 2

A delivery slip in duplicate is attached to the transport container. The listed contents of the delivery are distributed over several cartons (transport containers). This is noted on either the delivery slip or the bill of lading.

The delivery slip lists the merchandise by designation and order designation.

In the case of mixed orders, individually packed controllers and accessories are packed into the transport containers. With multiple-orders of the same units, the accessories might be found in a separate transport container.

Main Spindle Controller There is a barcode sticker on the RAC 2 packaging. It identifies contents in terms of design and order handling.



Figure 5.1: Barcode sticker on the RAC packaging (example)

A sticker is located on the side of the RAC 2 itelf. It contains all necessary information in the event that servicing should be necessary. It corresponds to the barcode sticker and contains all delivery information (see Figure 5.2).

The type plate (see Fig. 5.3) is located on the lower left side of the inside of the RAC 2 housing.



Figure 5.2: Service sticker (on the side of the unit, example)



Figure 5.3: RAC 2 type plate (on inside left side wall)

AS Programming Module Programming modules are always packed individually in plastic bags and then, additionally, in a carton.

There is a barcode sticker on the side of the carton on which the individual data is additionally printed in text form (Figure 5.4).

The plastic bag protects the AS programming module against static loads.



## Touching the printed circuit board can cause damage!

The parameter list is in the plastic bag with the programming module. It contains all the data about the programming module and documents the parameter values set at delivery.

If the parameter values should, for example, be lost upon commissioning, it is then posible to manually input the original values, taking them from the parameter list. The parameter list should be put in the machine file!

There is a type plate on the front of the programming module (see Fig. 3.1).



Figure 5.4: Barcode sticker on programming module carton

Accessories

The electrical accessories are packed in plastic bags with order information manually written on them.

Mechanical accessories M1-RAC 2 (mounting frame) are screwed onto the backwall of the controller.

Mechanical accessories M2-RAC 2 (optional hose cooling method) is delivered in a separate carton. It contains four flanges (unpacked) and all the screws (in a plastic bag) which will be needed to attach hose cooling. "M2-RAC 2" is written on the outside of the carton. The hose is not automatically part of the general delivery!

# 6. Storage and Transport

The controller must be kept dry, stored dust and impact free. The permissible ambient temperature range is from -30 degrees to +85 degrees C.

In the event of the danger of excessive vibrations, use a vibrationdamping base during transport!

Transport tips on the packaging:

## Achtung Hochwertige Elektronik Attention Fragile Electronic

Vor Nässe schützen Nicht belasten Do not apply load Do not drop Nicht werfen Nicht kanten Do not tip Keep dry

Figure 6.1: Safety tips for transport

DOK-DIAX01-RAC02\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

## 7. Mounting

Condition Upon Delivery

Structural Alterations to Accomodate Control Cabinet Inside Air Cooling The controller is standardly delivered with a cooling system which uses control cabinet outside air. If this should not agree with the cooling method intended in the machine, then structural changes become necessary. This should be done before the controller is built into the control cabinet because of screw access.

- Remove lid of cooling housing (1) (snap attachment)
- Detach lower skin plate of heatsink (2) by removing the fixing bolt. The screws are easily accessible from the underside of the controller.
- Remove cooling baffle (3) at the lower end of the heatsink. The fixing screws can only be reached from the back side of the controller!

A mounting plate without cut-outs should be used for cooling with control cabinet inside air.



Figure 7.1: Structural changes for control cabinet inside air cooling.

- Remove lid of cooling housing (1) (snap attachment)

- Detach lower skin plate of heatsink (2) by removing fixing bolt. The screws are easily accessible from the underside of the controller.
- Remove cooling baffle (3) at lower end of heatsink. The fixing screws can only be reached from the back of the controller!
- Assemble the hose cooling accessories (4) in accordance with the supplied plans for structural alteration (drawing no. 9.588.052.3-00).

An assembly plate without cut-outs should be used for hose cooling here as well.

Structural Changes to Accomodate Hose Cooling



Figure 7.2: Structural alterations for hose cooling

7.1. Mounting the Drive Controller in the Control Cabinet

– RAC 2 controller

- mechanical mounting accessories M1-RAC 2

- lifting equipment (weight RAC 2 = 121 kg)

The control cabinet should accordingly be prepared for the intended cooling method.

the sealing of the control cabinet (see "Category of Protection", Chapter

The following parts are needed for mounting into the control cabinet:

Installing the Mounting Frame for the Controller Remove the mounting frame from the backwall of the control cabinet or mounting plate. The mounting frame is located behind the control cabinet wall or mounting plate. The screws for fixing the controller should be screwed in so far that they cannot fall out. The mounting plate and creates a level surface for the flat gasket ring on the controller. It carries all threads and sealing rings that are needed to secure support for itself and the controller, and to guarantee

2.1).

Mounting the Controller

Installing the Controller

Lift the controller into its position in the control cabinet with the use of lifting equipment (a crane or something similar), and hang it onto the already mounted screws. Tighten the screws firmly into place.

The socket for the programming module is located on the left on the lower edge of the front plate of the RAC 2. The programming module is plushed into this socket and then secured with a knurled screw!



Before commissioning the RAC 2, plug in the programming module and secure it with a knurled screw.



Figure 7.3: Installing the RAC 2

8.	Installa	ation
Gι	uideline	es

- The wiring diagrams of the machine manufacturer must be followed when wiring the facility!
- INDRAMAT connection plans see "Electrical Connections of Main Spindle Drives; Project Planning Notes", (doc. no. 209-0042-4111) must be used when developing the facility wiring plans.
- The power connections safety guards on the front side of the unit must be in place before the unit is turned on and commissioned!
- The D-sub-plug-and-socket connection must be firmly screwed into place upon commissioning!
- The unit should be shut down prior to removing the AS programming module. The knurled screw must be firmly screwed into place during operation!
- The power cable cores must be twisted!
- The motor must be grounded on the controller!

# 9. Commissioning Guidelines

Commissioning procedures are identical for all main spindle controllers (RAC 2, RAC 3, RAC 4). For this reason, and because of the extensive range of functions, this procedure is explained only once in the INDRAMAT main spindle drive document and valid for them all, namely, in the document entitled "AC Main Spindle Drive with Controlled Asynchronous Motors or Frameless Spindle Motor, Description of Application" (doc. no. 209-0041-4109).

10. Servicing			
10.1. Fault Diagnosis	The RAC 2 diagnosis drive faults via the display located on the control panel. In the event of a fault, the drive brakes until it is standing still, at which point the RAC 2 then shuts power down. The fault diagnoses of the different main spindle controllers are the same.		
	The fault diagnoses and fault recovery guidelines are, therefore, de- scribed in the document entitled "AC Main Spindle Drives with Controlled Asynchronous Motors or Frameless Spindle Motor Description of Appli- cation", (doc. no. 209-0041-4109). It is valid for all INDRAMAT main spindle drives.		
10.2. Defective Controllers	As a result of the excessive weight of the controller, its exchange is only possible with the use of suitable lifting equipment (crane or something similar). In most cases, any occurring problem is repaired on location.		
	Should an exchange become necessary, then the drive can be adapted without any problem by unplugging the existing programming module from the defective controller and plugging it into the replacement control- ler. The RAC2 is matched to the drive and machine via parameters. These parameters are stored on the AS programming module. The drive with the new controller and existing programming module now operates in the same manner as the original drive.		
Repairs	Should the controller not work because of a fault, then this procedure must be followed:		
	<ul> <li>The master switch must be accessed and secured against switching back on before any work can be performed on the electrical equipment.</li> </ul>		
	<ul> <li>Only INDRAMAT customer service personnel or comparably trained personnel should be permitted to repair the equipment!</li> </ul>		
Controller Exchange	<ul> <li>All connections should be released and removed prior to exchanging equipment. The fixing screws should be released and lifting equipment should be used to remove the RAC 2 from the control cabinet.</li> </ul>		
	<ul> <li>Lifting equipment should also be used to lift the replacement back into the control cabinet. Remove the programming module from the defective unit, plug it into the replacement and, using the knurled screw, secure it against falling out.</li> </ul>		
	Do not remove or plug in the programming module with power on! The fixing bolt on the programming module must be tightly		

• DOK-DIAX01-RAC02\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

screwed into place when the RAC 2 is in operation!

- Connect the new RAC 2 in accordance with the wiring plans.
- Assume operation (see document, "AC Main Spindle Drive with Controlled Asynchronous Motor or Frameless Spindle Motor, Description of Application"), (doc. no. 209-0041-4109), the chapter on commissioning.

Returning a	- Fill out the return card for return of equipment/trouble protocol! A
Faulty Controller	sample of this card is depicted in Figure 10.1. It can be copied and used
	for your convenience.

- Return faulty equipment with the return card to the appropriate INDRAMAT service representative!

Completed by:	Company/Town:				Date:
When replacing single components, enter component designation			SN:		Supply job no.:
			SN:		Shipment date:
Machine manufacturer/Company:	ıy: Туре:		Machine no		if necessary - commissioning da
Fault in axis no.	□ horizontal □ vertical		Operating h	ours:	Date fault occurre
Fault status:         Fault         always present         occurs sporadically         occurs after hrs         occurs on impact/vibration         is temperature-dependent         other         *         *         *	Additional inform (e.g. LED diagnos messages in disp		ation: s ay)	Caus	e of fault: nown connection hort-circuit . damage cable connections
	S	Supplementary	nformatior	1	
General details: no function drive running irregularly uncontrolled drive motion fault in only one direction burnt-out fuse on supply other		Related incidents: <ul> <li>mechanical problems</li> <li>failure of power supply</li> <li>failure of controller</li> <li>motor failure</li> <li>cable break</li> <li>other</li> </ul>		Contro amplifi faulty c mains p defectiv defectiv faulty p connec other	oner, supply unit, er, mains power: ontrol voltage power fuse burnt out ve fan ve bleeder resistor ower supply voltage tion bolt sheared off
Control system: <ul> <li>no function</li> <li>faulty display</li> <li>no set-point output</li> <li>diagnosis</li> <li>dimensional shift in direction</li> <li>E-STOP circuit broken</li> <li>pos. control loop does not close</li> <li>programme sequence fault</li> <li>faulty internal auxiliary function (outputs)</li> <li>acknowledgements not accepted (inputs)</li> <li>other</li> </ul>		Motor: defective therm defective brake defective feedl defective feedl defective spee signal defective BLC earthing short- overheating other	nocouple e back d encoder signal circuit	Remarks:	

Fig. 10.1: Repair-Card

## **10.3. Service Representatives**

GERMANY	ITALY	NETHERLANDS
Lohr: Indramat GmbH BgmDrNebel-Str. 2 D - 97816 Lohr am Main Telefon 0 93 52/40-0 Telex 6 89 421 Telefax 0 93 52/40-4885	Rexroth S.p.A. Divisione Indramat Via G. Di Vittorio, 1 I - 20 063 Cernusco S/N. MI Telefon 02/9 23 65 - 270 Telex 331 695 Telefax 02/92 10 80 69	Hydraudyne Hydrauliek B.V. Kruisbroeksestraat 1a P.O.Box 32 NL - 5280 AA Boxtel Telefon 04 116/51 951 Telefax 04 116/51 483
Chemnitz:	ENGLAND	SWEDEN
Indramat GmbH c/o Rexroth Vertriebs- und Servicegesellschaft mbH Beckerstraße 31 O - 09120 Chemnitz Telefon 03 71/355-0 Telefax 03 71/355-225	G.L. Rexroth Ltd. Indramat Division 4 Esland Place, Love Lane Cirencester, Glos GL 7 1 YG Telefon 02 85/65 86 71 Telex 43 565 Telefax 02 85/65 49 91	AB Rexroth Mecman Indramat Division Vuravägen 7 S - 125 81 Stockholm Telefon 08/727 92 00 Telefax 08/99 75 15
Düsseldorf:		
Indramat GmbH Technisches Büro Ratingen Harkortstraße 25 Postfach 32 02 D - 40880 Ratingen Telefon 0 21 02/44 20 48 /-49 Telefax 0 21 02/41 315	AUSTRIA G.L. Rexroth GmbH Geschäftsbereich Indramat Randlstraße 14 A - 4061 Pasching Telefon 07 229/44 01-36 Telefax 07 229/44 01-80	SPAIN Rexroth S.A. Centro Industrial Santiga Obradors s/n E-08130 Santa Perpetua de Mogoda (Barcelona) Telefon 03/7 18 68 51 Telex 59 181 Telefax 03/718 98 62
FRANCE Rexroth - Sigma Division Indramat Parc des Barbanniers 4, Place du Village F - 92632 Gennevilliers Cedex Telefon 1/47 98 44 66 Telex 616 581 Telefax 1/47 94 69 41	REPUBLIC OF SLOVENIA Domel Otoki 21 SLO - 64 228 Zelezniki (Slowenien) Telefon 064/66 441 Telefax 064/ 673 49	Goimendi S.A. División Indramat Jolastokieta (Herrera) Apartado 11 37 San Sebastian, 20 017 Telefon 043/40 01 63 Telex 36 172 Telefax 043/39 93 95

Fig. 10.2: Service Representatives

• DOK-DIAX01-RAC02\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

LSA Control S.L. www.lsa-control.com comercial@lsa-control.com (+34) 960 62 43 01

## USA

Rexroth Corporation Indramat Division 255 Mittel Drive Wood Dale, Illinois 60 191 Telefon 708/8 60 - 10 10 Telefax 708/5 30 - 46 31

Rexroth Corporation Indramat Division 2110 Austin Avenue Rochester Hills, Michigan 48 309 Telefon 313/853 - 82 90 Telefax 313/853 - 82 98

KOREA

Seo Chang Corperation Ltd. 44 - 35 Yeouido-Dong Yeongdeungpo Ku Seoul, Korea Telefon 02/780 - 82 08 ~9 Telex K 22 686 SCCLTD Telefax 02/784 - 54 08 AUSTRALIA

Australian Machine Tool Co. Pty. Ltd. 9 Webber Parade East Keilor (Melbourne) Victoria, 3033 Australia Telefon 03/336 78 22 Telefax 03/336 17 52

INDIA

G. L. Rexroth Ind. Ltd. Indramat Division 67/2 Lavelle Road Bangalore - 560 001 Telefon 08/56 49 43 Telex 08 45 87 12 giril in Telefax 08/21 49 43

BRAZIL

Rexroth Hidráulica Ltda. Divisão Indramat Rua Heinrich Passold,130 CP 156 BR - 89. 107 000 Pomerode SC Telefon 04 73/87 03 21 Telex 47 32 88 REXR BR Telefax 04 73/87 02 51

Fig. 10.3: Service Representatives

Α

## 11. Index

Additional encoder input 31 Additional interface 14, 31 Allocation of standard interfaces to the connectio 34 Allocation of the functional options of the contro 34 Allocation of the Main Spindle Motors in the Power 36 ambient humidity 18 Ambient temperature-dependent reductions 17

### В

Bb "ready state" 32

## С

CNC control interfaces 14 Commissioning Guidelines 51 Condition Upon Delivery 42 Connection Plan 30 Contact saftey lid 20 Control panel 14 Controler input 31 Controller Exchange 52 Controller-Specific Connections 35 Cooling with Air Inside the Control Cabinet 12 Cooling with Air Outside the Control Cabinet 12

## D

Defective Controllers 52 Dimensions for cooling control cabinet with inside 23 Dimensions for cooling control cabinet with outsid 22 Dimensions for hose cooling 24 Dimensions Sheet 20 Dimensions sheet for hose cooling 25 Drill diagram 21

## Ε

electrical connecting accessories 16 Electrical Data 30 Environmental Conditions 17

## F

Fault Diagnosis 52 Feedback and CNC Connections 33 Feedback interfaces 14

#### I

Identification of Hardware 43 Installation Altitude 18 Installation Guidelines 50 Installing the RAC 2 49 Interface for monitoring and control circuits 14 Interface Options 15 Internal unit fan 32

#### L

Lead spindle feedback 31

DOK-DIAX01-RAC02\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

## Μ

Main spindle motor 31 main spindle motor 16 mains connecting cable 16 Mains connection 14. 32 Mains contactor control 31 mains contactor controls 30 Mains contactor monitoring contact 32 motor fan cable 16 Motor feedback 31 motor feedback cable 16 Motor NTC resistor connection 31 Motor NTC-resistor connection 14 motor power cable 16 Motor power connection 14, 31 Mounting 47 Mounting frame 16 Mounting the Drive Controller 48

#### Ρ

Plug-in terminal for motor NTC-resistor 35 Power connections to the motor 36 Power Connections to the Three-Phase Alternating C 36 Power Dissipation 26 Principle circuit diagram 32 Programming modul 16 Programming module 14 Programming Module AS 39

#### R

RAC 2 controler 16 Ready state 31 Repair Card 54 Repairs 52 Returning a Faulty Controller 53

## S

Service Representatives 55 Signal and analogue outputs 31 Spindle feedback 31 Storage and Transport 46 Structural Alterations to Accomodate Control Cabin 47 Structural Changes to Accomodate Hose Cooling 47 Switch Q1 14, 32 Switching power supply 32 Synchronous input 31

## Т

Technical Data 37 Thermal Data 26 Type Codes 38 Type codes for AS programming modules 41

## U

Use of Cooling Devices in Control Cabinets 28

## W

Weights 37

• DOK-DIAX01-RAC02\*\*\*\*\*\*-PRJ1-DE-E1,44 • 07.97

## **Summary of Supplementary Documentation**



Figure 12.1: Summary of supplementary documentation





LSA Control S.L. www.lsa-control.com comercial@lsa-control.com (+34) 960 62 43 01